

Description

The B060A400AC PWM servo drive is designed to drive brushless DC motors at a high switching frequency. A single red/green LED and a single digital output indicate operating status. The drive is fully protected against over-voltage, under voltage, over-current, over-heating and short-circuits across motor, ground and power leads. Furthermore, the drive can interface with digital controllers or be used stand-alone, and requires a single unregulated AC or DC power supply and a nominal 24 VDC logic supply. Loop gain, current limit, input gain, offset, and ramp can be adjusted using 14-turn potentiometers. The offset adjusting potentiometer can also be used as an on-board input signal for testing purposes. The drive accepts quadrature encoder inputs or Hall sensor inputs for velocity control.

Power Range	
Peak Current	60 A
Continuous Current	30 A
AC Supply Voltage	200 - 240 VAC
DC Supply Voltage	255 - 373 VDC



Features

- ▲ DIP Switch Selectable Current Loop Tuning
- Ramped Command Input Adjustment
- ▲ Selectable Velocity Loop Integrator Values
- ▲ Selectable Inhibit/Enable Logic
- ▲ Selectable Fault Logic

- ▲ Selectable Tachometer Feedback Scaling
- ▲ Multiple Modes of Operation
- ▲ AC or DC Supply Input
- Built-in Shunt Regulator Circuit
- ▲ Directional Inhibit Inputs for Limit Switches
- Encoder Velocity Mode

MODES OF OPERATION

- Current
- Duty Cycle
- Voltage
- IR Comp
- Encoder Velocity
- Hall Velocity
- Tachometer

COMMAND SOURCE

±10 V Analog

FEEDBACK SUPPORTED

- Halls
- Incremental Encoder
- Tachometer (±60 DC)

INPUTS/OUTPUTS

- Inhibit/Enable Inputs
- Current Monitor Output
- Fault Output
- Current Reference Output
- Velocity Monitor Output
- At Velocity Output


COMPLIANCES & AGENCY APPROVALS

- RoHS
- UL and cUL Pending
- CE Pending





BLOCK DIAGRAM

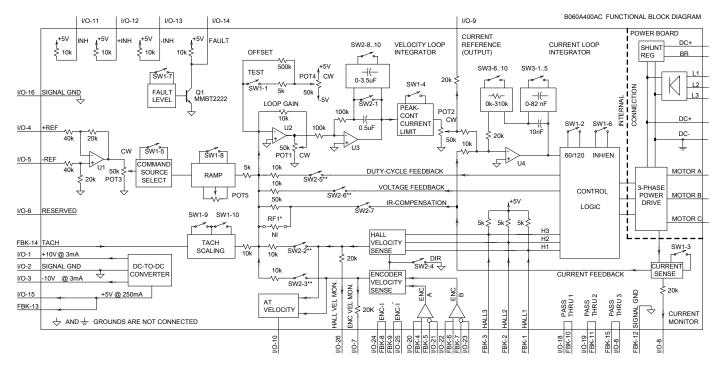

MODE SELECTIONS	SW2-1	SW2-2	SW2-3	SW2-4	SW2-5	SW2-6	SW2-7
CURRENT MODE	ON	OFF	OFF	NA	OFF	OFF	OFF
HALL VELOCITY	OFF	ON	OFF	ON/OFF	OFF	OFF	OFF
ENCODER VELOCITY	OFF	OFF	ON	ON/OFF	OFF	OFF	OFF
DUTY CYCLE MODE	OFF	OFF	OFF	NA	ON	OFF	OFF
VOLTAGE MODE	OFF	OFF	OFF	NA	OFF	ON	OFF
IR COMPENSATION	OFF	OFF	OFF	NA	OFF	ON	ON
TACHOMETER MODE	OFF	OFF	OFF	NA	OFF	OFF	OFF

LED GREEN - NORMAL OPERATION, LED RED-FAULT
RECOMMENDED SETTING FOR CURRENT MODE - POT1 FULLY CCW, POT3 FULLY CW
DRIVES ARE SHIPPED IN CURRENT MODE WITH MAXIMUM CURRENT SETTING
SW2-8 MUST BE ON FOR PROPER OPERATION IN HALL VELOCITY MODE
FOR OTHER SWITCH FUNCTIONS SEE SWITCH DESCRIPTION

- * OPTIONAL USER INSTALLED THROUGH-HOLE COMPONENT
- ** NO MORE THAN ONE SWITCH CAN BE ON

Information on Approvals and Compliances



RoHS (Reduction of Hazardous Substances) is intended to prevent hazardous substances such as lead from being manufactured in electrical and electronic equipment.





SPECIFICATIONS

Description	Power S Units	Specifications Value
Rated Voltage	VAC (VDC)	240 (339)
AC Supply Voltage Range	VAC	200 - 240
AC Supply Minimum	VAC	180
AC Supply Maximum	VAC	264
AC Input Phases ¹	-	3
AC Supply Frequency	Hz	50 - 60
DC Supply Voltage Range ²	VDC	255 - 373
DC Bus Over Voltage Limit	VDC	420
DC Bus Under Voltage Limit	VDC	205
Logic Supply Voltage (Required)	VDC	20 - 30 (@ 850 mA)
	A	60
Maximum Peak Output Current ³ Maximum Continuous Output Current	A	30
Max. Continuous Output Current Max. Continuous Output Power @ Rated Voltage	W	10630
·	W	560
Max. Continuous Power Dissipation @ Rated Voltage	μF	1120
Internal Bus Capacitance External Shunt Resistor Minimum Resistance ⁴	Ω	20
	VDC	399
Internal Shunt Regulator Turn-on Voltage	-	600
Minimum Load Inductance (Line-To-Line)5	μH kHz	14
Switching Frequency	КП2 %	100
Maximum Output PWM Duty Cycle	-	
Low Voltage Supply Outputs	- Control (+5 VDC (250 mA) Specifications
Description	Units	Value
Command Sources	-	±10 V Analog
Feedback Supported	-	Halls, Incremental Encoder, Tachometer (±60 VDC)
Commutation Methods	-	Trapezoidal
Modes of Operation	-	Current, Duty Cycle, Voltage, IR Comp, Hall Velocity, Encoder Velocity, Tachometer
Motors Supported	-	Single Phase (Brushed, Voice Coil, Inductive Load), Three Phase (Brushless)
Hardware Protection	-	Over Current, Over Temperature, Over Voltage, Short Circuit (Phase-Phase & Phase-Ground), Under Voltage
Internal Shunt Regulator	-	Yes
Internal Shunt Resistor	-	No
Description	Mechanica Units	al Specifications Value
Agency Approvals	-	RoHS, UL and cUL Pending, CE Pending
Size (H x W x D)	mm (in)	256.5 x 182.6 x 83.7 (10.1 x 7.2 x 3.3)
Weight	g (oz)	2821.3 (99.5)
Heatsink (Base) Temperature Range ⁶	°C (°F)	0 - 75 (32 - 167)
Storage Temperature Range	°C (°F)	-40 - 85 (-40 - 185)
Form Factor	-	Panel Mount
Cooling System	-	Natural Convection
FEEDBACK Connector	-	15-pin, high-density, female D-sub
I/O Connector	-	26-pin, high-density, female D-sub
LOGIC POWER Connector	-	2-port, 5.08 mm spaced, enclosed, friction lock header
FAN Connector	-	2-port, 5.08 mm spaced, enclosed, friction lock header
MOTOR POWER Connector	-	4-port, 10.16 mm spaced, enclosed, friction lock header
DC POWER Connector	-	4-port, 10.16 mm spaced, enclosed, friction lock header

Notes

- Can operate on single-phase AC (208 VAC minimum) as long as output power does not exceed 3kW maximum.

 Large inrush current may occur upon initial DC supply connection to DC Bus.

 Capable of supplying drive rated peak current for 2 seconds with 3 second foldback to continuous value. Longer times are possible with lower current limits.

 ADVANCED Motion Controls recommends using an external fuse in series with an external shunt resistor. A 5 amp time delay fuse is typical.

 Lower inductance is acceptable for bus voltages well below maximum. Use external inductance to meet requirements.

 Additional cooling and/or heatsink may be required to achieve rated performance.





PIN FUNCTIONS

		I/O Signal Connector	
Pin	Name	Description / Notes	1/0
1	+10V OUT	+10V @ 3 mA. For customer use.	0
2	SGN GND	Signal Ground	SGND
3	-10V OUT	-10V @ 3 mA. For customer use.	0
4	+REF	D''('' (' ' ' ' ' ' ' ' ' ' ' ' ' ' '	ı
5	-REF	Differential reference input, maximum 15V, 40k input resistance.	ı
6	RESERVED	Reserved	-
7	ENCODER VELOCITY MONITOR	Encoder Velocity Monitor. Analog output proportional to the frequency of the encoder lines or, equivalently, to motor speed. Scaling is 25 kHz/V.	0
8	CURRENT MONITOR	This output represents the actual motor current. Scaling: SW1-3 = OFF, 1V = 10 A motor current SW1-3 = ON, 1V = 20 A motor current	0
9	CURRENT REFERENCE	This is the command signal to the internal current-loop. The maximum peak current rating of the drive always equals 7.24 V at this pin.	0
10	AT VELOCITY	Open Collector output. Internally pulled up to 5V through 10k. This output is low when the speed is within 10% of the commanded speed. Encoder or Hall Velocity is selectable through DIP Switch settings.	0
11	INHIBIT/ENABLE	This TTL level input signal turns off all power devices of the "H" bridge when pulled to ground with SW1-6=ON. Operates from 3.3V to 24V. If SW1-6=OFF, pulling this pin to ground will enable the drive.	I
12	+INHIBIT/ENABLE	If SW1-6=ON, ground pin 12 to inhibit (+) drive output and pin 13 to inhibit (-) drive output. If	ı
13	-INHIBIT/ENABLE	SW1-6=OFF, ground pin 12 to enable (+) drive output and pin 13 to enable (-) drive output. These inputs will NOT cause a fault condition or a red LED. Operates from 3.3V to 24V.	I
14	FAULT OUT	This output activates during short circuit, over-voltage, under voltage, inhibit, over- temperature and power-on reset. A red LED also indicates a fault condition. Active high or active low selectable through SW1-7.	0
15	+5V OUT (Common with FBK-13)	+5V @ 250mA. For customer use. Note that the total current on Feedback Connector Pin 13 and this pin should not exceed 250mA.	0
16	SGN GND (Common with FBK-12)	Signal Ground	SGNE
17	PASS-THROUGH	Connected to Feedback Connector Pin 15.	-
18	PASS-THROUGH	Connected to Feedback Connector Pin 10.	-
19	PASS-THROUGH	Connected to Feedback Connector Pin 11.	-
20	ENCODER A+ OUT (Common with FBK-4)	Differential Encoder Output from Feedback Connector Pin 4	0
21	ENCODER A- OUT (Common with FBK-5)	Differential Encoder Output from Feedback Connector Pin 5	0
22	ENCODER B+ OUT (Common with FBK-6)	Differential Encoder Output from Feedback Connector Pin 6	0
23	ENCODER B- OUT (Common with FBK-7)	Differential Encoder Output from Feedback Connector Pin 7	0
24	ENCODER I+ OUT (Common with FBK-8)	Differential Encoder Output from Feedback Connector Pin 8	0
25	ENCODER I- OUT (Common with FBK-9)	Differential Encoder Output from Feedback Connector Pin 9	0
26	HALL VELOCITY MONITOR	Hall Velocity Monitor. Analog output proportional to the Hall frequency or, equivalently, to motor speed. Scaling is 100 Hz/V.	0

Feedback Connector					
Pin	Name	Description / Notes	1/0		
1	HALL 1	Hell concertionate internal 2K null up. Logic leveler mayimum level input is 4.5 VDC	I		
2	HALL 2	Hall sensor inputs, internal 2K pull-up. Logic levels: maximum low level input is 1.5 VDC, minimum high level input is 3.5 VDC.	I		
3	HALL 3	Inilianian night level input is 3.5 v bc.	I		
4	ENCODER A+ IN (Common with I/O-20)	Differential Encoder Input, Channel A			
5	ENCODER A- IN (Common with I/O-21)				
6	ENCODER B+ IN (Common with I/O-22)	Differential Encoder Input, Channel B			
7	ENCODER B- IN (Common with I/O-23)				
8	ENCODER I+ IN (Common with I/O-24)	Differential Freeder Innut Index Mark (Not Deguired)	I		
9	ENCODER I- IN (Common with I/O-25)	Differential Encoder Input, Index Mark (Not Required)	I		
10	PASS-THROUGH	Connected to I/O Connector Pin 18	-		
11	PASS-THROUGH	Connected to I/O Connector Pin 19	-		
12	SGN GND (Common with I/O-16)	Signal Ground	SGND		
13	+5V OUT (Common with I/O-15)	+5V @ 250mA. For customer use. Note that the total current on I/O Connector Pin 15 and this pin should not exceed 250mA.	0		
14	TACH IN	Tachometer Input, 60k ohm input resistance, ± 60 V max. (Scalable with SW1-9,10)			
15	PASS-THROUGH	Connected to I/O Connector Pin 17	-		

Logic Power Connector						
Pin	Name	Description / Notes	I/O			
1	LOGIC GND	Logic Supply Ground	Sold & Serviced By: SCNDMATE			
2	LOGIC PWR	Logic Supply Input. Required for drive operation.	Toll Free Phone (877) SERV098			
			Toll Free Phone (877) SERVO98			

roll Free Phone (877) SERV098 Toll Free Fax (877) SERV099 www.electromate.com sales@electromate.com





Fan Power Connector					
Pin	Name	Description / Notes	1/0		
1	FAN GND	Fan Ground	GND		
2	FAN PWR	Fan Power Input	I		

Motor Power Connector						
Pin	Name	Description / Notes	1/0			
1	CHASSIS	Chassis Ground	CGND			
2	MOTOR A	Motor Phase A	0			
3	MOTOR B	Motor Phase A	0			
4	MOTOR C	Motor Phase B	0			

	DC Power Connector						
Pin	Name	Description / Notes	1/0				
1	DC-	Power Ground	PGND				
2	DC+	DC Power Input	I				
3	DC+	External Shunt Resistor Connection. Connect resistor between DC+ and BR.	I				
4	BR	External Shark Resistor Confidention. Confident resistor between DC+ and BR.	-				

AC Power Connector						
Pin	Name	Description / Notes	1/0			
1	L1		I			
2	L2	AC Supply Input (Three Phase). External 20 A time delay fuses are recommended in series with the AC input lines.	I			
3	L3	with the AC input lines.				
4	CHASSIS	Chassis Ground	CGND			





HARDWARE SETTINGS

Switch Functions

SW-1	Description	Setting		
300-1	Description	On	Off	
1-1	Test / Offset controls the sensitivity of the "offset" pot. This is used as an on-board reference signal in test mode.	Test	Offset	
1-2	120/60 degree commutation phasing.	120 degree phasing	60 degree phasing	
1-3	Current scaling. When OFF, this increases the sensitivity of the current sense thus reducing both peak and continuous current limit by 50%.	100%	50%	
1-4	Continuous current reduction.	Continuous / peak current limit ratio is 50%	Continuous / peak current limit ratio is 25%	
1-5	Reserved	-	-	
1-6	Inhibit / Enable	Ground I/O Connector pins 11, 12, 13 to inhibit motor outputs	Ground I/O Connector pins 11, 12, 13 to enable motor outputs	
1-7	Active Fault Level of P1-14.	Active HIGH	Active LOW	
1-8	Ramped Command	Enable Ramping	Disable Ramping	
1-9	Tachometer Input Scaling Switches. These switches adjust the	See Tachometer Innu	t Scaling Table below	
1-10	value of the allowed maximum tachometer input voltage.	See Tachometer Input Scaling Table below.		

Tachometer Input Scaling Table

DIP Switches SW1-9 and SW1-10 are used to set the Maximum Tachometer Input Voltage value according to the following table.

±V	SW1-9	SW1-10
10	ON	ON
26	OFF	ON
43	ON	OFF
60	OFF	OFF

Current Limit Adjustments

These amplifiers feature separate peak and continuous current limit adjustments. The current limit adjustment Pot 2 adjusts both peak and continuous current limit at the same time. Pot 2 has 12 active turns and one inactive turn on each end and is approximately linear. Thus, to adjust the current limit turn the potentiometer counter-clockwise to zero, then turn clockwise to the appropriate value. In many applications it is sufficient to use only the DIP-switches for current limit adjustments. SW1-3 reduces both peak and continuous current limit by 50% when OFF. SW1-4 reduces only the continuous current limit by 50% when OFF:

SW-4	CONTINUOUS / PEAK CURRENT LIMIT RATIO
ON	50%
OFF	25%

I/O Connector Pin 9 is the input to the internal current amplifier power stage. Since the output current is proportional to I/O Connector Pin 9, the adjusted current limit can easily be observed at this pin without connecting the motor. Note that a command signal must be applied to the reference inputs to obtain a reading on I/O Connector Pin 9. The maximum peak current value equals 7.24 V at this pin and the maximum continuous current value equals 3.62 V at this pin. If SW3=ON, peak rated amplifier current = 7.24 V. If SW3=OFF, ½ peak rated amplifier current = 7.24 V.

The actual output current can be monitored at I/O Connector Pin 8.





SW-2	Description	Set	ting		
5VV-2	Description	On	Off		
2-1	Mode Selection. See Mode Selection Table below for full description of mode switch settings.	Current Mode	Velocity Modes		
2-2	Hall Velocity feedback. This connects the internally generated velocity signal from the Hall sensors.	Hall sensor velocity feedback enabled.	Hall sensor velocity feedback disabled.		
2-3	Encoder Velocity feedback. This connects the internally generated velocity signal from the encoder.	Encoder velocity feedback enabled.	Encoder velocity feedback		
2-4	Velocity Feedback Polarity	Toggles the polarity of the velocity feedback signal (Encoder or Hall velocity mode only).			
2-5	Duty Cycle feedback. This connects the internally generated velocity signal from the output stage.	Duty cycle feedback enabled.	Duty cycle feedback disabled.		
2-6	Voltage Mode.	Voltage feedback enabled.	Voltage feedback disable		
2-7	IR Compensation Mode.	IR Comp enabled.	IR Comp disabled.		
2-8			ı		
2-9	Velocity Loop Integrator Capacitor Switches. These adjust the	See Velocity Loop Integrator Capacitance Table below			
2-10	value of the integrator capacitor in the velocity mode.				

Mode Selection Table

Operating modes can be selected by setting SW2 DIP switches according to the following table.

	SW2-1	SW2-2	SW2-3	SW2-4	SW2-5	SW2-6	SW2-7
CURRENT	ON	OFF	OFF	Χ	OFF	X	OFF
DUTY CYCLE	OFF	OFF	OFF	X	ON	X	OFF
VOLTAGE	OFF	OFF	OFF	Χ	OFF	ON	OFF
IR COMP	OFF	OFF	OFF	X	OFF	ON	ON
HALL VELOCITY	OFF	ON	OFF	Χ	OFF	ON	OFF
ENCODER VELOCITY	OFF	OFF	ON	Χ	OFF	Χ	OFF
TACHOMETER	OFF	OFF	OFF	X	OFF	X	OFF

X = does not affect mode

Velocity Loop Integrator Capacitance Table

Set the Velocity Loop Integrator Capacitance value according to the following table. Decreasing the capacitance increases the integrator gain.

μF	SW2-8	SW2-9	SW2-10
0.5	OFF	OFF	OFF
1.0	ON	OFF	OFF
1.5	OFF	ON	OFF
2.0	ON	ON	OFF
2.5	OFF	OFF	ON
3.0	ON	OFF	ON
3.5	OFF	ON	ON
4.0	ON	ON	ON





Current Loop Tuning Values

SW3 DIP switches add additional resistance and capacitance to the current loop tuning circuitry. SW3 switches 1-5 add additional parallel capacitance to the current loop integrator capacitor, and SW3 switches 6-10 add additional series resistance to the current loop gain resistor (see Block Diagram). Capacitance and resistance values are given in the tables below along with the appropriate DIP switch settings.

								SW:	3								
Switch		ddition			•	_	•				_	•			_	•	
	SHORT	.082	.077	.072	.067	.062	.057	.052	.047	.035	.030	.025	.020	.015	.010	.005	OPEN
1	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
3	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
4	ON	ON	ON	ON	ON	ON	ON	ON	ON	OFF							
5	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

							sv	V3								
Switch		Add	litional	Current	Loop G	ain Resi	stance	(kΩ) – (i	ncreasin	g the res	istance ir	ncreases	the prop	ortional g	gain)	
Switch	0	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
6	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
7	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
8	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
9	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
10	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON
Switch (continued)	160	170	180	190	200	210	220	230	240	250	260	270	280	290	300	310
6	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
7	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
8	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
9	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
10	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

Potentiometer Functions

Potentiometer	Description	Turning CW
Pot 1	Loop gain adjustment in open loop and velocity modes. Turn this pot fully CCW in current mode.	Increases loop gain
Pot 2	Current limit. Adjusts both the continuous and peak current limit while maintaining the continuous/peak ratio set by the DIP Switches.	Increases current limit
Pot 3	Reference in gain. This potentiometer adjusts the ratio between input signal and output variables (voltage, current, and velocity).	Increases reference input gain
Pot 4	Test/Offset. Used to adjust any imbalance in the input signal or in the drive. When SW1-1 (DIP switch) is ON, the sensitivity of this pot is greatly increased allowing it to be used as an on-board signal source for testing purposes.	Zero speed setting is at the midpoint of this 14-turn pot.
Pot 5	Ramp Time. Sets the ramp time for the command input signal.	Increases ramp time (slower Accel or Decel)

Ramping Command (Pot 5):



The built-in ramp circuit allows the command input to be ramped linearly. This feature is activated by setting SW1-8-E-ON-THE SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise. Ramping vales: 671 SERVOSS ramp time can be set for up to 30 seconds in reaching the max command by adjusting Pot 5 fully clockwise.



Through-hole Components[†]

Location	Description
RF1	IR Compensation Scaling. Through-hole resistor that can be added to configure the amplifier for IR Compensation mode. See section below on IR Compensation Notes for more details.

IR Compensation Notes

For applications that will use IR Compensation mode, a resistor can be added to the location named in the table above. The combination of the added resistor and correct DIP switch settings will configure the amplifier for IR Compensation mode. While in IR Compensation mode, the amplifier will adjust the duty cycle to compensate for changes in the output current. Consult the amplifier's functional block diagram and the manufacturer's website for more information.


[†]NOTE: DAMAGE DONE TO THE DRIVE WHILE PERFORMING THESE MODIFICATIONS WILL VOID THE WARRANTY.





MECHANICAL INFORMATION

		Feedback Connector
Connector Information		15-pin, high-density, female D-sub
Mating Connector	Details	TYCO: Plug P/N 748364-1; Housing P/N 5748677-1; Terminals P/N 1658670-2 (loose) or 1658670-1 (strip)
ŭ	Included with Drive	No
		11 PASS-THROUGH 12 SGN GND 13 +5V OUT 14 TACH IN 15 PASS-THROUGH

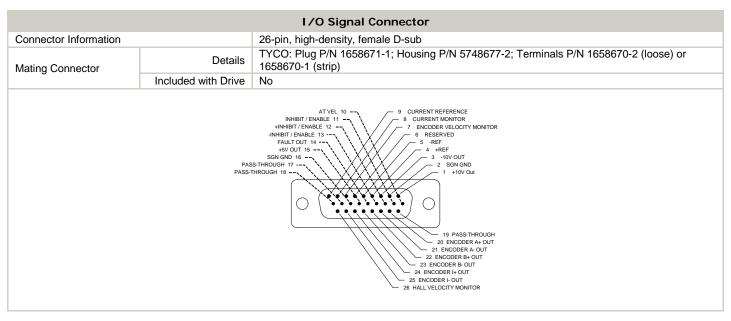

Logic Power Connector							
Connector Information		2-pin, 5.08 mm spaced, enclosed, friction lock header					
Moting Connector	Details	Phoenix Contact: P/N 1757019					
Mating Connector	Included with Drive	Yes					
Included with Drive Yes							





Fan Power Connector							
Connector Information		2-port, 5.08 mm spaced, enclosed, friction lock header					
Mating Connector	Details	Phoenix Contact: P/N 1757019					
	Included with Drive	No					
Included with Drive No							

	Motor Power Connector								
Connector Information		4-pin, 10.16 mm spaced, enclosed, friction lock header							
Mating Connector	Details	Phoenix Contact: P/N 1913523							
Mating Connector	Included with Drive	Yes							
		4 MOT C 3 MOT B							

DC Power Connector			
Connector Information		4-pin, 10.16 mm spaced, enclosed, friction lock header	
Mating Connector	Details	Phoenix Contact: P/N 1913523	
	Included with Drive	Yes	
		4 BR 3 DC+	


AC Power Connector			
Connector Information		4-pin, 10.16 mm spaced, enclosed, friction lock header	
Mating Connector	Details	Phoenix Contact: P/N 1913523	
	Included with Drive	Yes	
4 CHASSIS 3 L3			



B060A400AC




MOUNTING DIMENSIONS

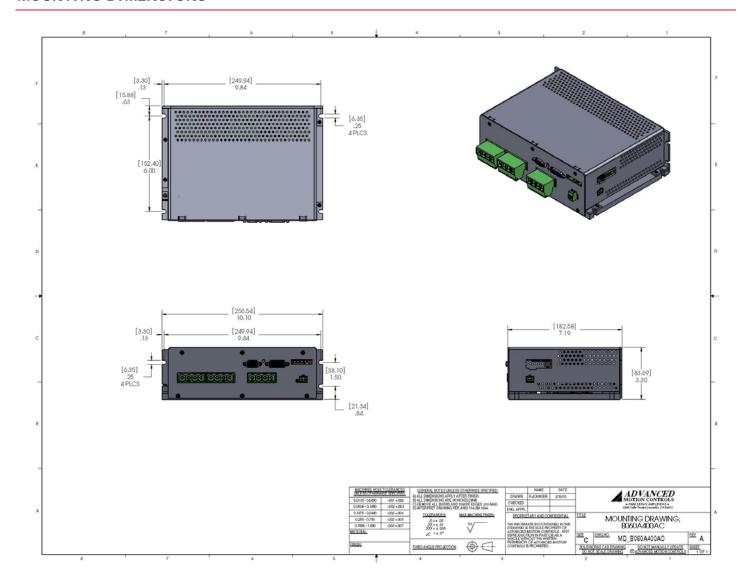





PART NUMBERING INFORMATION

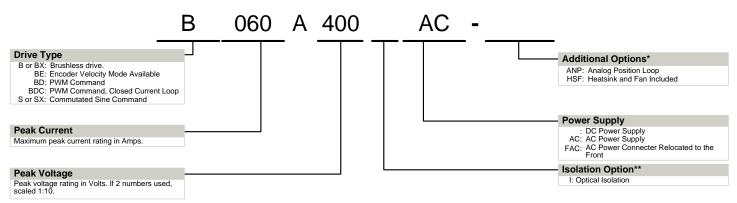

* Options available for orders with sufficient volume. Contact ADVANCED Motion Controls for more information.

DigiFlex® Performance $^{\text{TM}}$ series of products are available in many configurations. Note that not all possible part number combinations are offered as standard drives. All models listed in the selection tables of the website are readily available, standard product offerings.

ADVANCED Motion Controls also has the capability to promptly develop and deliver specified products for OEMs with volume requests. Our Applications and Engineering Departments will work closely with your design team through all stages of development in order to provide the best servo drive solution for your system. Equipped with on-site manufacturing for quick-turn customs capabilities, ADVANCED Motion Controls utilizes our years of engineering and manufacturing expertise to decrease your costs and time-to-market while increasing system quality and reliability. Feel free to contact Applications Engineering for further information and details.


Examples of Customized Products

- Optimized Footprint
- ▲ Private Label Software
- ▲ OEM Specified Connectors
- No Outer Case
- ▲ Increased Current Resolution
- ✓ Increased Temperature Range
- ✓ Integrated System I/O

- ▲ Tailored Project File
- Silkscreen Branding
- Optimized Base Plate
- ▲ Increased Current Limits
- ▲ Increased Voltage Range
- Conformal Coating
- Multi-Axis Configurations
- Reduced Profile Size and Weight

Available Accessories

ADVANCED Motion Controls offers a variety of accessories designed to facilitate drive integration into a servo system. Visit www.a-m-c.com to see which accessories will assist with your application design and implementation.

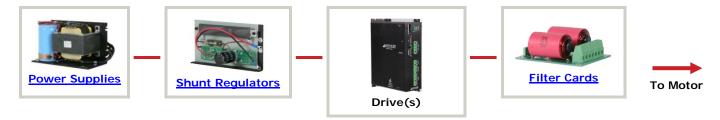



^{**} Isolation comes standard on all AC supply drives and most DC supply drives 200V and above. Consult selection tables of the website or drive datasheet block diagram to see if isolation is included.