

FE100-50-RM

FlexPro® Series

Product Status: Active

SPECIFICATIONS

Current Peak
Current Continuous
DC Supply Voltage
Network Communication
100 A
50 A
20 - 90 VDC
R\$485/232



The **FE100-50-RM** is a FlexPro® series servo drive with IMPACTTM architecture.

The **FE100-50-RM** offers full tuning control of all servo loops and is designed to drive brushed and brushless servo motors, stepper motors, and AC induction motors. The drive accepts a variety of external command signals, or can use the built-in Motion Engine, an internal motion controller used with Sequencing and Indexing commands. Programmable digital and analog I/O are included to enhance interfacing with external controllers and devices.

The **FE100-50-RM** features a RS485/232 interface for network communication and USB connectivity for drive configuration and setup. All drive and motor parameters are stored in non-volatile memory.


IMPACTTM (Integrated Motion Platform And Control Technology) combines exceptional processing capability and high-current components to create powerful, compact, feature-loaded servo solutions. IMPACTTM is used in all FlexPro[®] drives and is available in custom products as well.

FEATURES

- Four Quadrant Regenerative Operation
- Programmable Gain Settings
- PIDF Velocity Loop
- Fully Configurable Current, Voltage, Velocity and Position Limits
- Compact Size, High Power Density
- On-the-Fly Mode Switching
- On-the-Fly Gain Set Switching
- Dedicated Safe Torque Off (STO) Inputs
- Space Vector Modulation (SVM) Technology

| Feedback Supported | Absolute Encoder BiSS C-Mode EnDat 2.2 Incremental Encoder Hall Sensors Aux Incremental Encoder Tachometer (±10V) | Motors Supported | Three PhaseSingle PhaseStepperAC Induction | Modes of Operation | CurrentVelocityPosition |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------|--------------------------------------------------------------------------------------------------------|
| Command Sources | • Indexing | Inputs / Outputs | 4 Programmable Digital Inputs 3 Programmable Digital Outputs 1 Programmable Analog Input | Agency Approvals | RoHSUL (Pending)CE (Pending)TUV Rheinland (STO) (Pending) |



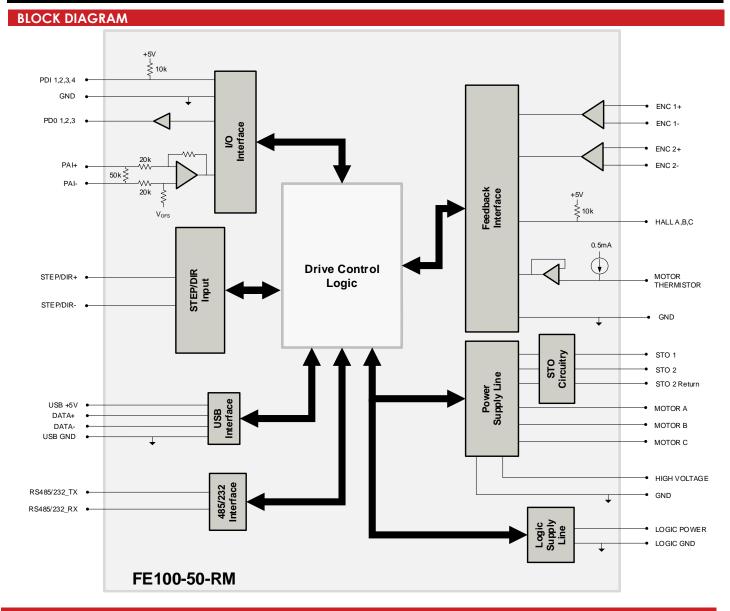

INFORMATION ON APPROVALS AND COMPLIANCES



The RoHS Directive restricts the use of certain substances including lead, mercury, cadmium, hexavalent chromium and halogenated flame retardants PBB and PBDE in electronic equipment.

Sold & Serviced By:



877-737-8698 sales@electromate.com www.electromate.com





| SPECIFICATIONS | | | | |
|-----------------------------------------------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| | Electric | al Specifications | | |
| Description | Units | Value Value | | |
| DC Supply Input Range | VDC | 20 – 90 | | |
| DC Supply Undervoltage | VDC | 15 | | |
| DC Supply Overvoltage | VDC | 100 | | |
| Logic Supply Input Range (required) | VDC | 10 – 55 | | |
| Safe Torque Off Voltage (Default) | VDC | 5 | | |
| Minimum Required External Bus Capacitance | μF | 270 | | |
| Maximum Peak Current Output ¹ | A (Arms) | 100 (70.7) | | |
| Maximum Continuous Current Output ² | A (Arms) | 50 (50) | | |
| Efficiency at Rated Power | % | 99 | | |
| Maximum Continuous Output Power | W | 4455 | | |
| Maximum Power Dissipation at Rated Power | W | 45 | | |
| Minimum Load Inductance (line-to-line) ³ | μН | 250 | | |
| Switching Frequency | kHz | 20 | | |
| Maximum Output PWM Duty Cycle | % | 83 | | |
| Maximom Corport WW Bory Cycle | | I Specifications | | |
| Description | Units | Value | | |
| Communication Interfaces | - | RS485/232 (USB for configuration) | | |
| Command Sources | - | ±10 V Analog, Over the Network, Sequencing, Indexing, Jogging, Step & Direction, Encoder Following | | |
| Feedback Supported | - | Absolute Encoder (BiSS C-Mode, EnDat 2.2), Hall Sensors, Incremental Encoder, Auxiliary Incremental Encoder, Tachometer (±10V) | | |
| Commutation Methods | - | Sinusoidal, Trapezoidal | | |
| Modes of Operation | - | Current, Velocity, Position | | |
| Motors Supported ⁴ | - | Three Phase (Brushless Servo), Single Phase (Brushed Servo, Voice Coil, Inductive Load), Stepper (2- or 3-Phase Closed Loop), AC Induction (Closed Loop Vector) | | |
| Hardware Protection | - | 40+ Configurable Functions, Over Current, Over Temperature (Drive & Motor), Over Voltage, Short Circuit (Phase-Phase & Phase-Ground), Under Voltage | | |
| Programmable Digital Inputs/Outputs | - | 4/3 | | |
| Programmable Analog Inputs/Outputs | - | 1/0 | | |
| Primary I/O Logic Level | - | 5 VDC, not isolated | | |
| Current Loop Sample Time | μS | 50 | | |
| Velocity Loop Sample Time | μS | 100 | | |
| Position Loop Sample Time | μS | 100 | | |
| Maximum Encoder Frequency | MHz | 20 (5 pre-quadrature) | | |
| | Mechani | cal Specifications | | |
| Description | Units | Value | | |
| Size | mm (in) | 43.2 x 38.1 x 12.4 (1.70 x 1.50 x 0.49) | | |
| Weight | g (oz) | 42.5 (1.5) | | |
| Ambient Operating Temperature Range ⁵ | °C (°F) | 0 – 65 (32 – 149) | | |
| Storage Temperature Range | °C (°F) | -40 – 85 (-40 – 185) | | |
| Relative Humidity | - | 0-95%, non-condensing | | |
| Form Factor | - | PCB Mounted | | |
| P1 SIGNAL CONNECTOR* | - | 80-pin 0.4mm spaced connector | | |
| TERMINAL PINS | - | 51x Terminal Pins | | |

Notes

- Notes

 1. Capable of supplying drive rated peak current for 2 seconds with 10 second foldback to continuous value. Longer times are possible with lower current limits.

 2. Continuous A_{ms} value attainable when RMS Charge-Based Limiting is used.

 3. Lower inductance is acceptable for bus voltages well below maximum. Use external inductance to meet requirements.

 4. Maximum motor speed for stepper motors is 600 RPM. Consult the hardware installation manual for 2-phase stepper wiring configuration.

 5. Additional cooling and/or heatsink may be required to achieve rated performance.

*Mating Connector Kit

Surface mount board connector for P1 and board spacers can be ordered as a kit using ADVANCED Motion Controls' part number KC-MC1XFE01.



| | | | P1 – Signal | Connect <u>or</u> | | | |
|--------------------------------------|----------------------|--------------------------------------------------------------------------------|-------------|-------------------|-------------------------------------------|---------------------------------------------------------------------------------------------|--------------------------|
| Pin | Name | Description / Notes | 1/0 | Pin | Name | Description / Notes | I/O |
| 1 | GROUND | Ground | GND | 2 | GROUND | Ground | GND |
| 3 | PAI-1+ | Differential Programmable Analog Input or | | 4 | DATA+ USB | USB Data Channel | 1/0 |
| 5 | PAI-1- | Reference Signal Input (12-bit Resolution) | | 6 | DATA- USB | | 1/0 |
| 7 | THERMISTOR | Motor Thermal Protection. | | 8 | GROUND | Ground | GND |
| 9 | GROUND | Ground | GND | 10 | SCLA | I ² C Data Signals for Addressing, Network Error LED, and Bridge Status LED. See | 0 |
| 11 | ENC 1 DATA+ / A+ | Differential Data Line for Absolute Encoders | 1/0 | 12 | SDAA | Hardware Manual for more info. | 1/0 |
| 13 | FNC 1 DATA /A | (BiSS: SLO+/-) or Differential Incremental | 1/0 | 14 | HALL A | Traidware Maribartor more into. | |
| | ENC 1 DATA- / A- | Encoder A. | _ | | | | |
| 15 | ENC 1 CLK+ / B+ | Differential Clock Line for Absolute Encoders (BiSS: MA+/-) or Differential | 1/0 | 16 | HALL B | Single-ended Commutation Sensor Inputs | - 1 |
| 17 | ENC 1 CLK- / B- | Incremental Encoder B. | 1/0 | 18 | HALL C | | 1 |
| 19 | GROUND | Ground | GND | 20 | GROUND | Ground | GND |
| | | | | | | Croona | |
| 21 | ENC 1 REF+ / I+ | Differential Reference Mark for Absolute | ' | 22 | ENC 2 A+ | | 1 |
| 23 | ENC 1 REF- / I- | Encoders (Leave open for BiSS) or Differential Incremental Encoder Index. | | 24 | ENC 2 A- | Differential Incremental Encoder A. | |
| | · · | | | | | | |
| 25 | RS485/232 RX | Receive Line (RS485 or RS232) | 1/0 | 26 | ENC 2 B+ | Differential Incremental Encoder B. | |
| 27 | RS485/232 TX | Transmit Line (RS485 or RS232) | 1/0 | 28 | ENC 2 B- | 2oromia moromonia Encodor B. | |
| 29 | RS485_DIR_CTRL | Active High 485TX Enable Signal | 1/0 | 30 | ENC 2 I+ | Differential Incremental Encoder Index. | 1 |
| 31 | PDI-1 | Programmable Digital Input | I | 32 | ENC 2 I- | | 1 |
| 33 | PDI-2 | Programmable Digital Input | I | 34 | PDO-1 | Programmable Digital Output (TTL/8mA) | 0 |
| 35 | PDI-3 | Programmable Digital Input | I | 36 | PDO-2 | Programmable Digital Output (TTL/8mA) | 0 |
| 37 | PDI-4 | Programmable Digital Input | 1 | 38 | PDO-3 | Programmable Digital Output (TTL/8mA) | 0 |
| 39 | GROUND | Ground | GND | 40 | GROUND | Ground | GND |
| 41 | RESERVED | Reserved. Do not connect. | - | 42 | RESERVED | Reserved. Do not connect. | - |
| 43 | RESERVED | Reserved. Do not connect. | - | 44 | RESERVED | Reserved. Do not connect. | - |
| 45 | RESERVED | Reserved. Do not connect. | - | 46 | RESERVED | Reserved. Do not connect. | - |
| 47 | RESERVED | Reserved. Do not connect. | - | 48 | RESERVED | Reserved. Do not connect. | - |
| 49 | RESERVED | Reserved. Do not connect. | - | 50 | RESERVED | Reserved. Do not connect. | - |
| 51 | RESERVED | Reserved. Do not connect. | - | 52 | RESERVED | Reserved. Do not connect. | - |
| 53 | RESERVED | Reserved. Do not connect. | - | 54 | RESERVED | Reserved. Do not connect. | - |
| 55 | RESERVED | Reserved. Do not connect. | - | 56 | RESERVED | Reserved. Do not connect. | - |
| 57 | RESERVED | Reserved. Do not connect. | - | 58 | RESERVED | Reserved. Do not connect. | - |
| 59 | GROUND | Ground | GND | 60 | GROUND | Ground | GND |
| 61 | RESERVED | Reserved. Do not connect. | - | 62 | RESERVED | Reserved. Do not connect. | - |
| 63 | RESERVED | Reserved. Do not connect. | - | 64 | RESERVED | Reserved. Do not connect. | - |
| 65 | RESERVED | Reserved. Do not connect. | - | 66 | RESERVED | Reserved. Do not connect. | - |
| 67 | RESERVED | Reserved. Do not connect. | - | 68 | STEP | Step Input. | 1 |
| 69 | RESERVED | Reserved. Do not connect. | - | 70 | DIR | Direction Input. | - 1 |
| 71 | RESERVED | Reserved. Do not connect. | - | 72 | RESERVED | Reserved. Do not connect. | - |
| 70 | . 5\/ | +5VDC unprotected supply for local logic | | 7.4 | DECED/CD | Danage de Danage de La constant | |
| 73 | +5V | (See Note 1) | 0 | 74 | RESERVED | Reserved. Do not connect. | |
| 75 | +5V_USER | +5VDC User Supply for feedback or | 0 | 76 | +3V3 | +3.3VDC supply for local logic signals | 0 |
| 77 | +5V_USER | external devices (See Note 1) | 0 | 78 | +3V3 | (100 mA max) | 0 |
| 79 | GROUND | Ground | GND | 80 | GROUND | Ground | GND |
| Cor | nnector Information | 80-pin, 0.4mm spaced connector | | • • • | +3\3 +3V3 GROUND 8 | | - USB A+ USB ROUND |
| Matir | ng Connector Details | PANASONIC: P/N AXT380224 | • | | | | |
| Mating Connector Included with Drive | | No | 2 | | GROUND 79 1 GROUND 1 +5V USER 75 5 PAI-1- | | |

Notes 1.

Drive Status LED and Node Addressing

SCLA (P1-10); SDAA (P1-12)

The SCLA and SDAA pins allow Drive Status LED monitoring and Node Addressing to be performed with an I²C bus I/O expander. For more information on how to utilize and configure the I/O expander into an interface board, consult the hardware installation manual.


^{1.} Total current through pins P1-73/75/77 should not exceed 300mA, while no single pin should be loaded more than 150mA.



TERMINAL PIN LOCATIONS

The 51 Terminal Pins provide connection to the high power drive signals. Terminal Pins must be soldered to an interface board.

| Pin | Name | Description / Notes | I/O |
|----------|------------------------|----------------------------------------------|------------------|
| T1 | STO-1 INPUT | Safe Torque Off – Input 1 | I |
| T2 | STO RETURN | Safe Torque Off Return | STORET |
| T3 | STO-2 INPUT | Safe Torque Off – Input 2 | - |
| T4 | LOGIC PWR | Logic Supply Input (10-55 VDC) (required) | 1 |
| T5 | POWER GND | Ground. | GND |
| T6 | POWER GND | Ground. | GND |
| T7 T8 | POWER GND POWER GND | \dashv | GND GND |
| T9 | MOTOR C | | 0 |
| T10 | MOTOR C | ┦ | 0 |
| T11 | MOTOR C | 7 | 0 |
| T12 | MOTOR C | Motor Phase C. All provided | 0 |
| T13 | MOTOR C | motor phase output pins must be used. | 0 |
| T14 | MOTOR C | De usea. | 0 |
| T15 | MOTOR C | - | 0 |
| T16 | MOTOR C | - | 0 |
| T17 | HV | | i |
| T18 | HV | \dashv | i i |
| T19 | HV | - | i i |
| T20 | HV | - | i i |
| T21 | HV | DC Supply Input (20-90 VDC). | H-i- |
| T22 | HV | Minimum 270 μF external capacitance required | - i - |
| T23 | HV | between HV and POWER GND. | <u> </u> |
| T24 | HV | - | <u> </u> |
| T25 | HV | \dashv | <u> </u> |
| T26 | HV | - | |
| T27 | MOTOR B | + | 0 |
| T28 | MOTOR B | \dashv | 0 |
| T29 | MOTOR B | \dashv | 0 |
| T30 | MOTOR B | Motor Phase B. All provided | 0 |
| T31 | MOTOR B | motor phase output pins must | 0 |
| T32 | MOTOR B | be used. | 0 |
| T33 | MOTOR B | - | 0 |
| T34 | MOTOR B | - | 0 |
| T35 | POWER GND | | GND |
| T36 | POWER GND | \dashv | GND |
| T37 | POWER GND | \dashv | GND |
| T38 | POWER GND | \dashv | GND |
| T39 | POWER GND | Ground. | GND |
| T40 | POWER GND | - | GND |
| T41 | POWER GND | 1 | GND |
| T42 | POWER GND | ┨ | GND |
| T43 | POWER GND | ┨ | GND |
| T44 | MOTOR A | 1 | 0 |
| T45 | MOTOR A | ┨ | 0 |
| T46 | MOTOR A | 1 | 0 |
| T47 | MOTOR A | Motor Phase A. All provided | 0 |
| T48 | MOTOR A | motor phase output pins must be used. | 0 |
| T49 | MOTOR A | - Le 03eu. | 0 |
| T48 | MOTOR A | Ⅎ | 0 |
| T49 | MOTOR A | Ⅎ | 0 |
| T50 | MOTOR A | | 0 |
| T51 | MOTOR A | | 0 |

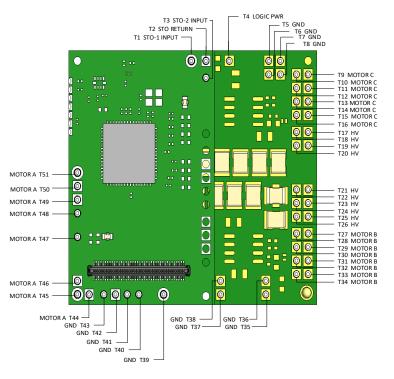


Terminal Pin Details

Safe Torque Off (STO) Inputs

The Safe Torque Off (STO) inputs are dedicated +5VDC sinking single-ended inputs. For applications not using STO functionality, disabling of the STO feature is required for proper drive operation. STO may be disabled by following the STO Disable wiring instructions as given in the hardware installation manual. Consult the hardware installation manual for more information.



MOUNTING DIMENSIONS

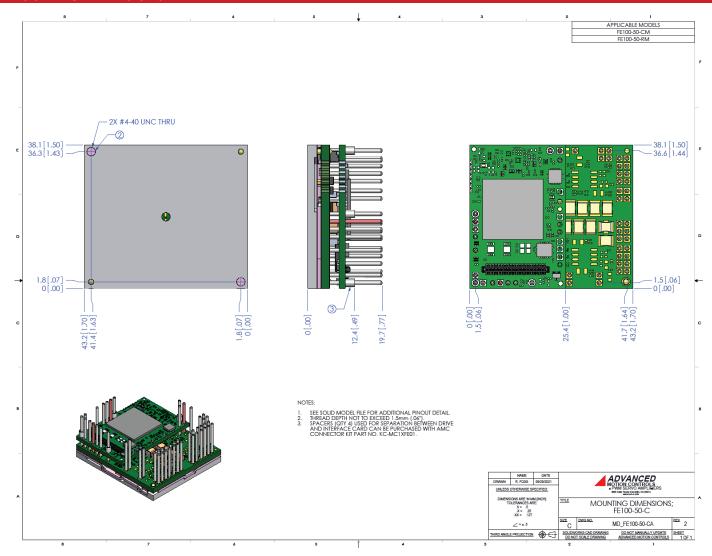

Sold & Serviced By:



sales@electromate.com www.electromate.com





PART NUMBERING AND CUSTOMIZATION INFORMATION E 100 - 50 - R M F **Drive Series Feedback** FlexPro® Multi Encoder (BiSS, 5V Incremental) **Environment Network Communication** EXtended Environment Ε **E**therCAT С **C**ANopen Form Factor RS485/232 FlexPro® Embedded **Continuous Current** FlexPro® E (W/ Development board) D 5 **5**A FlexPro® Machine Mount 10 **10**A Maximum DC Bus Voltage 25 25A 45C 45A (continuous only, no peak) 060 60 VDC 50 50A 100 100 VDC 60C 60A (continuous only, no peak)

ADVANCED Motion Controls also has the capability to promptly develop and deliver specified products for OEMs with volume requests. Our Applications and Engineering Departments will work closely with your design team through all stages of development in order to provide the best servo drive solution for your system. Equipped with on-site manufacturing for quick-turn customs capabilities, ADVANCED Motion Controls utilizes our years of engineering and manufacturing expertise to decrease your costs and time-to-market while increasing system quality and reliability.

Examples of Customized Products

- Optimized Footprint
- Private Label Software
- ▲ OEM Specified Connectors
- ▲ No Outer Case
- ▲ Increased Current Resolution
- ▲ Increased Temperature Range
- Custom Control Interface
- ✓ Integrated System I/O

- ▲ Tailored Project File
- ✓ Silkscreen Branding
- ▲ Optimized Base Plate
- ▲ Increased Current Limits
- ▲ Increased Voltage Range
- Conformal Coating
- Multi-Axis Configurations
- ▲ Reduced Profile Size and Weight

Feel free to contact us for further information and details!

Available Accessories

ADVANCED Motion Controls offers a variety of accessories designed to facilitate drive integration into a servo system. Visit www.a-m-c.com to see which accessories will assist with your application design and implementation.

Development Board

The FE100-50-RM is offered in a pre-soldered development board assembly to provide easy connections to motor, power, and signal functions. The development board assembly can be ordered as model number **FD100-50-RM**.



All specifications in this document are subject to change without written notice. Actual product may differ from pictures provided in this document.